

Industrial air coolers Arctigo IS

Instruction manual







This Instruction Manual is to be used in combination with Alfa Laval publication ERC00537 (General installation and maintenance instructions for air coolers).


Product information

Comprehensive product information for all Alfa Laval air heat exchangers is available on www.alfalaval.com, including:

- Product leaflets
- General installation and mainenance instructions
- Instruction manuals
- Dimensional drawings
- Electrical connections



Ceiling mounting bracket detail

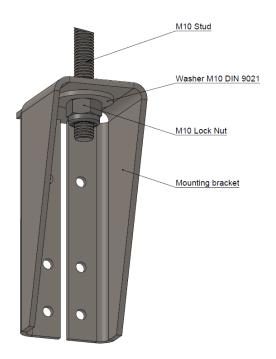



Use washer M10 DIN9021 when mounting unit on the ceiling.








Lifting instructions





Always use all marked lifting points Angle between lines may not exceed 60°

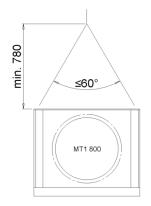


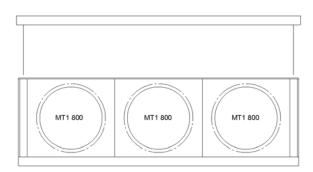

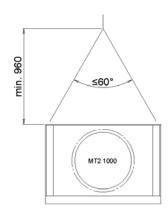

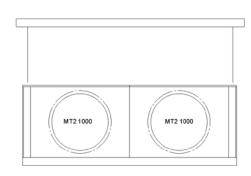


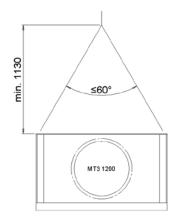

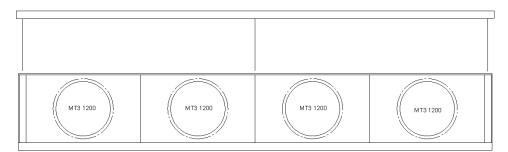





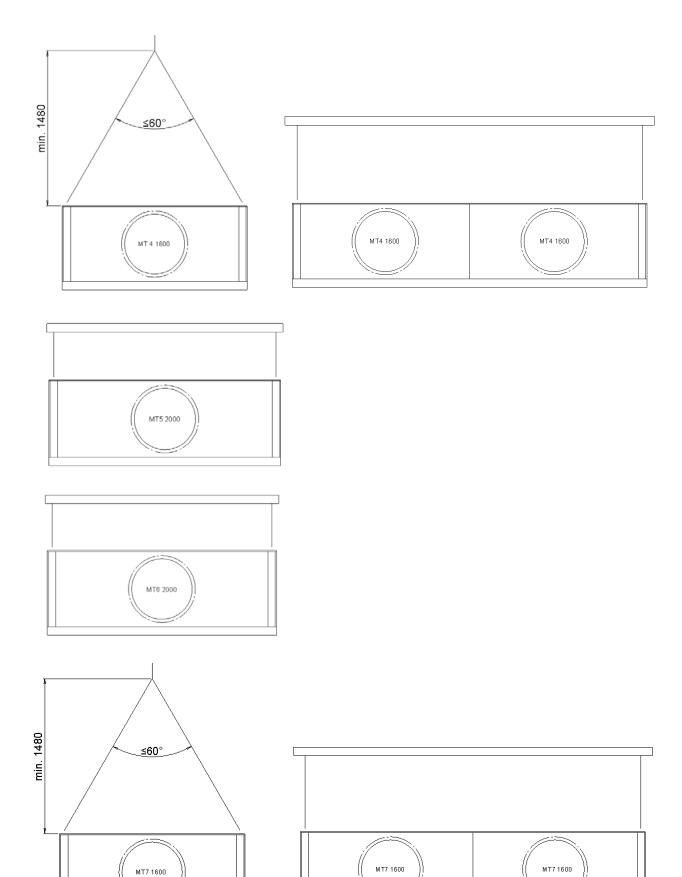






Electrical installation

AC MOTOR POWER SWITCH CONNECTION

Basic motor connection

Switch Y/D

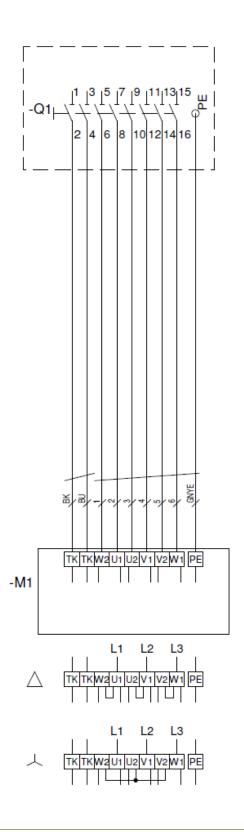






AC MOTORS POWER CONNECTION

3-phase motors - Switch Y and D

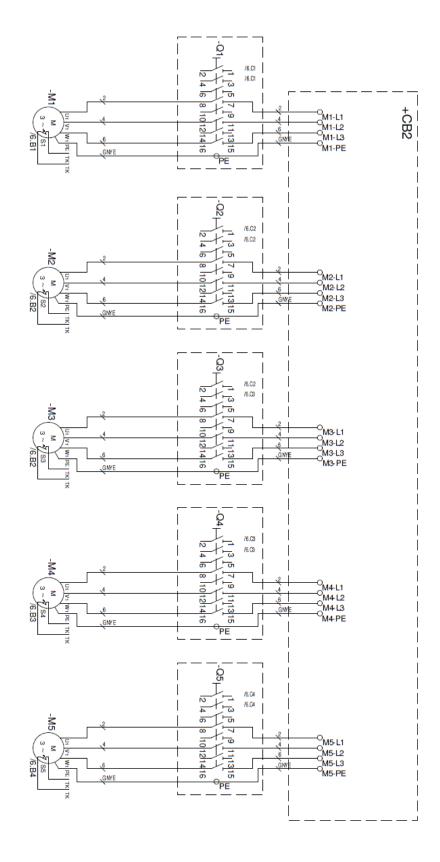






AC MOTORS POWER CONNECTION

3-phase motors - Continued

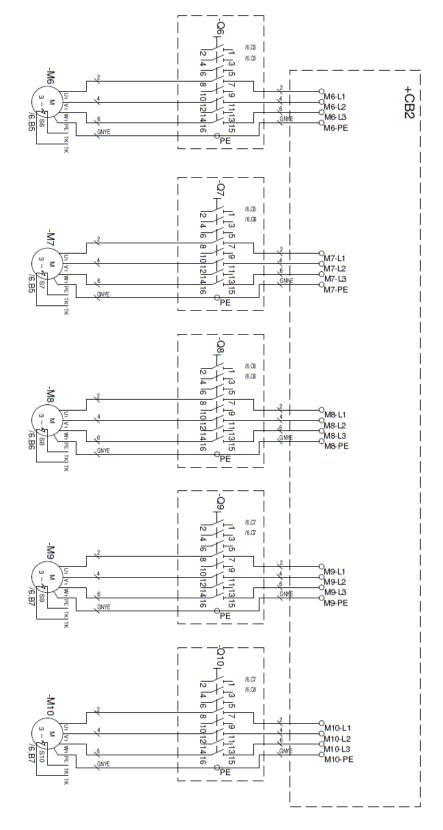






AC MOTORS POWER CONNECTION

3-phase motors - Continued

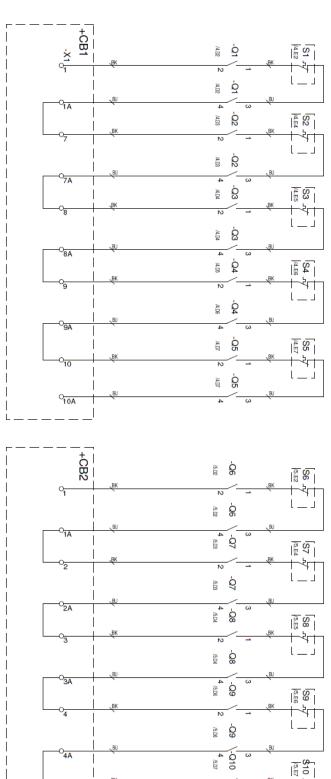




<u>Ω10</u>

O_{5A}




EC MOTORS POWER CONNECTION


3-phase motors

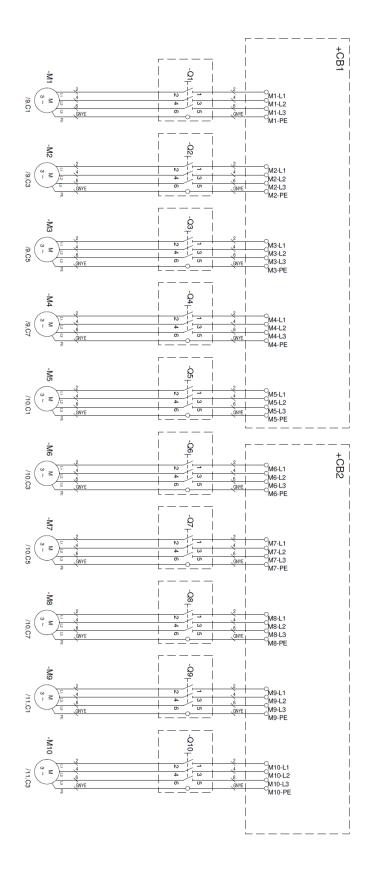






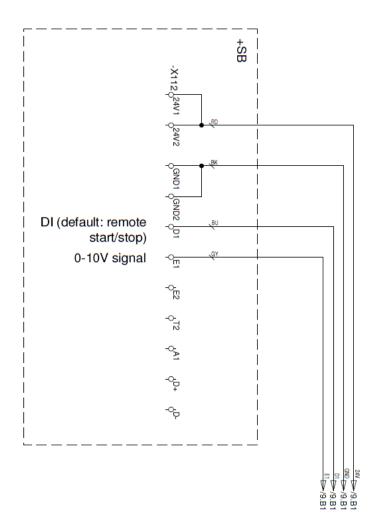

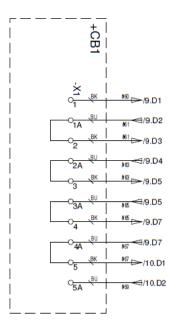


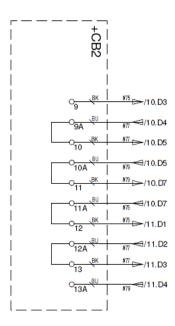






Continued

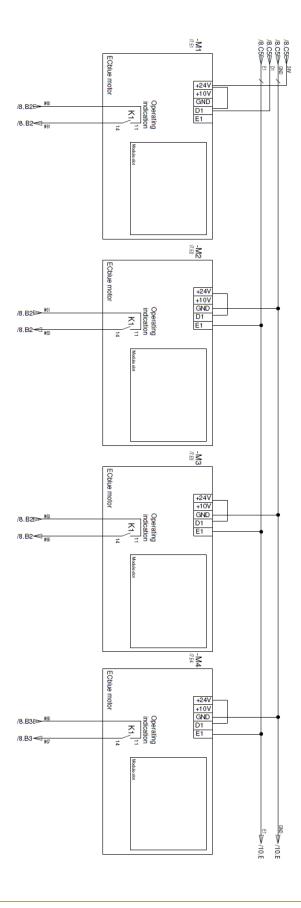






Continued

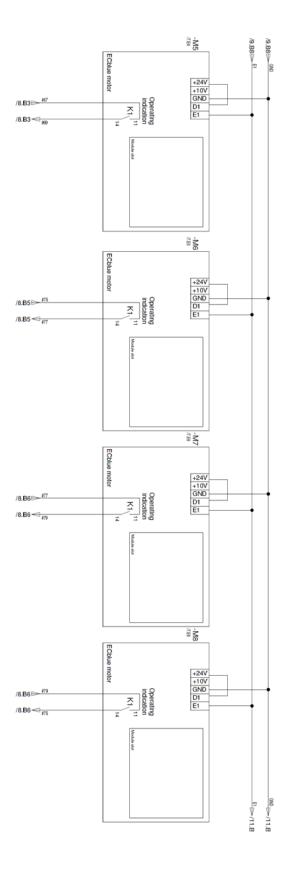






Continued

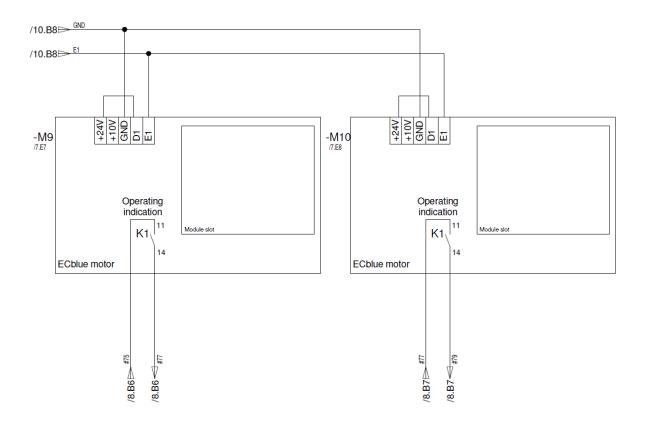






CONNECTION BOX FOR ELECTRIC DEFROST

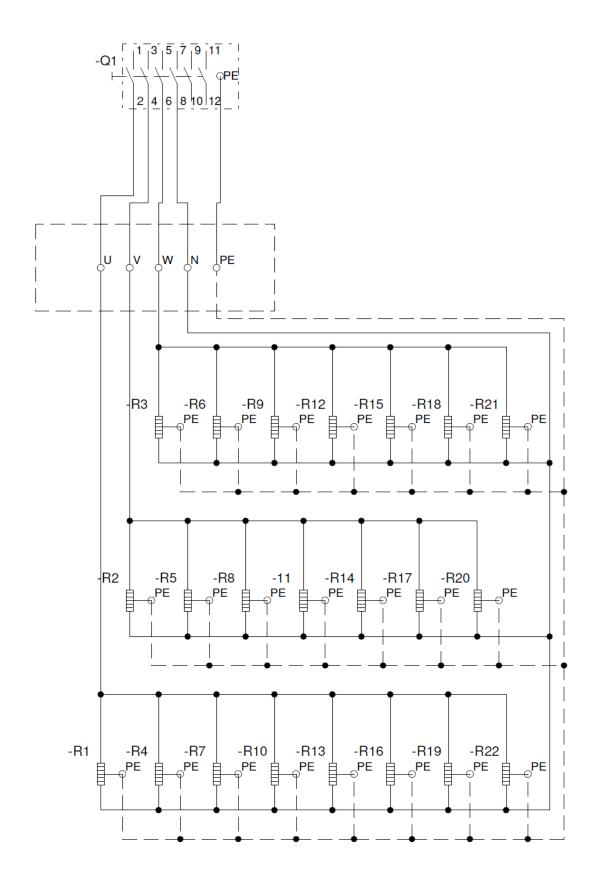





Spare Parts

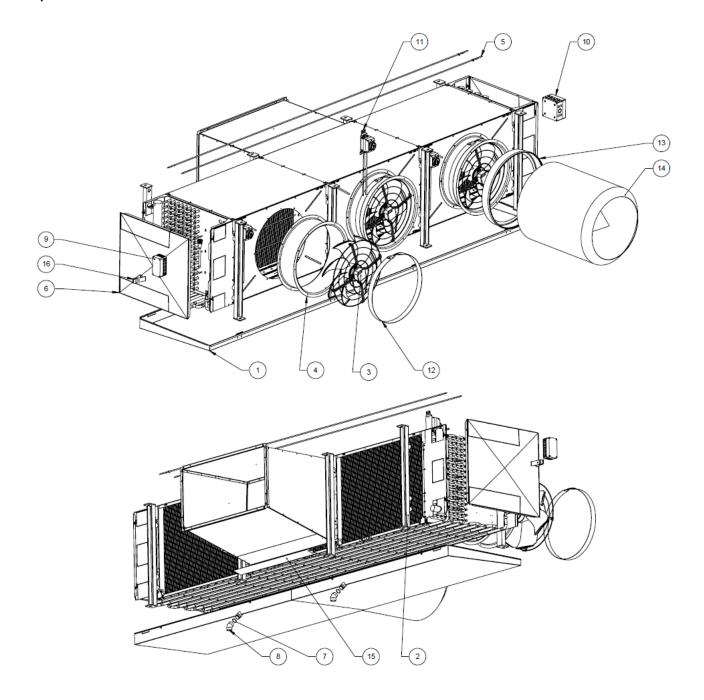

No	Description	No	Description
1	Driptray	9	Terminal Box 1809
2	Mounting Feet	10	Terminal Box 1818
3	Fan	11	Isolation Switch
4	Fanring	12	Heating Mat Fanring
5	Heating Element	13	Airsockring
6	Bendcover Door	14	Shutupsock
7	O-Ring	15	Heating Foil E5
8	Knee-PVC	16	Distributor Mounting Bracket





www.alfalaval.com