



TABLICA KONFIGURACJI MULTI

AGREGAT ZEWNĘTRZNY

38QUS018DS2



1 JEDNOSTKA WEWNĘTRZNA

09
12
18

2 JEDNOSTKI WEWNĘTRZNE

09 + 09
09 + 12
12 + 12

3 JEDNOSTKI WEWNĘTRZNE

-

4 JEDNOSTKI WEWNĘTRZNE

-

38QUS027DS3



09
12
18

09 + 09
09 + 12
09 + 18
12 + 12
12 + 18
18 + 18

09 + 09 + 09
09 + 09 + 12
09 + 09 + 18
09 + 09 + 18
09 + 12 + 12
12 + 12 + 12

38QUS036DS4



09
12
18

09 + 09 + 09
09 + 09 + 12
09 + 09 + 18
09 + 12 + 12
09 + 12 + 18
09 + 18 + 18
12 + 12 + 12
12 + 12 + 18
12 + 18 + 18

09 + 09 + 09 + 09
09 + 09 + 09 + 12
09 + 09 + 09 + 18
09 + 09 + 12 + 12
09 + 09 + 12 + 18
09 + 12 + 12 + 12
09 + 12 + 12 + 18
12 + 12 + 12 + 12